








**Middle Wallet**

## Printing Instruction

*CraftsmanGus*

1. File > Print
2. Click on “Page Setup” button make sure your paper size is set to A4 and Scale at 100%
3. In “Pages Sizing & Handling” click on “Size” button and select “Actual size”

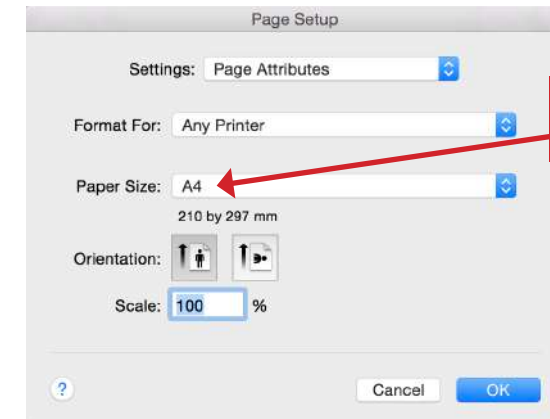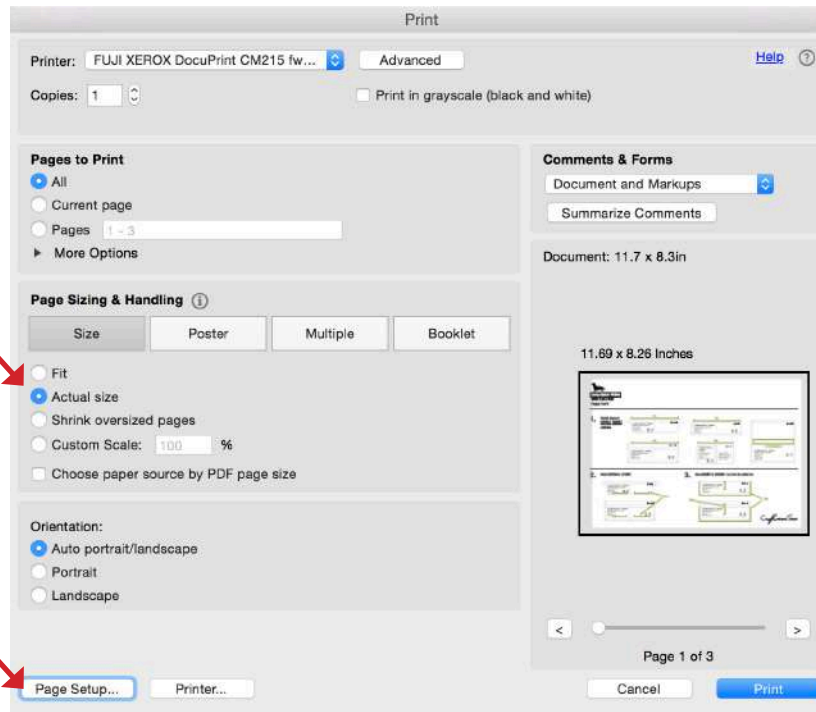

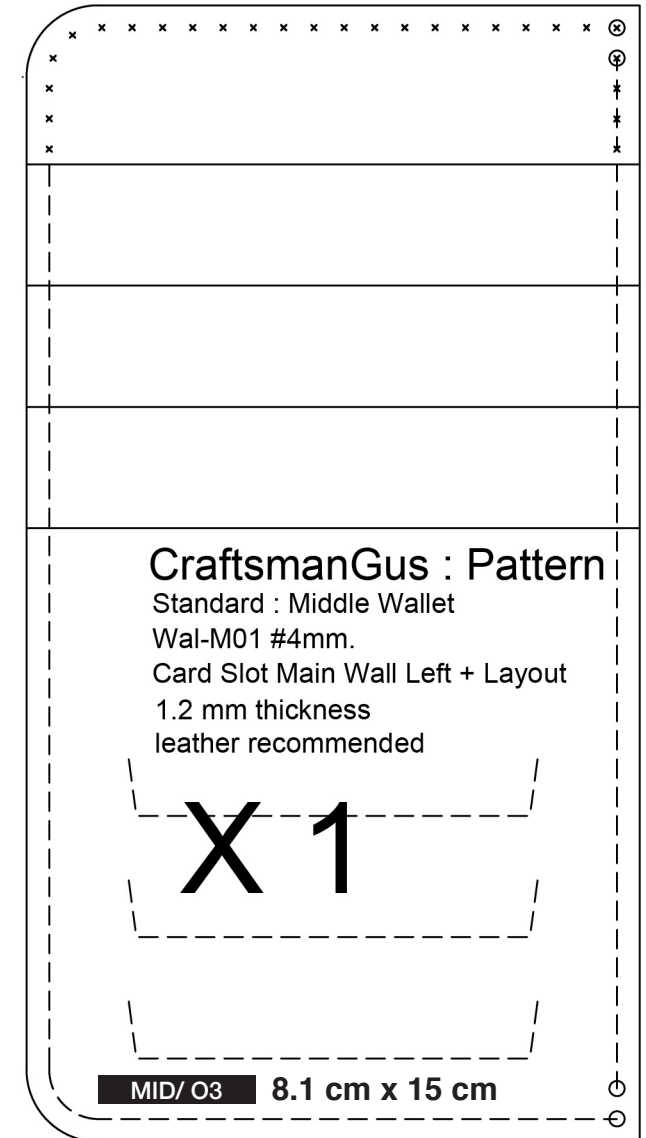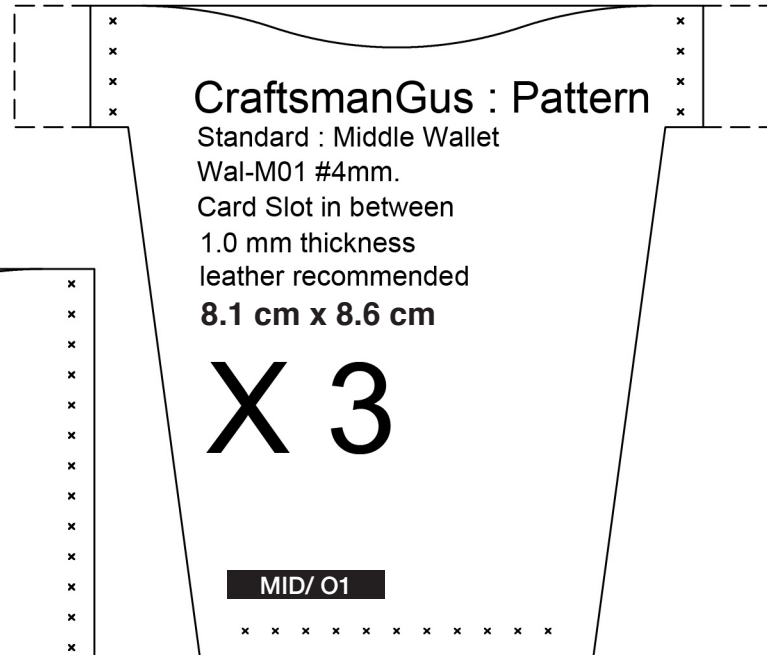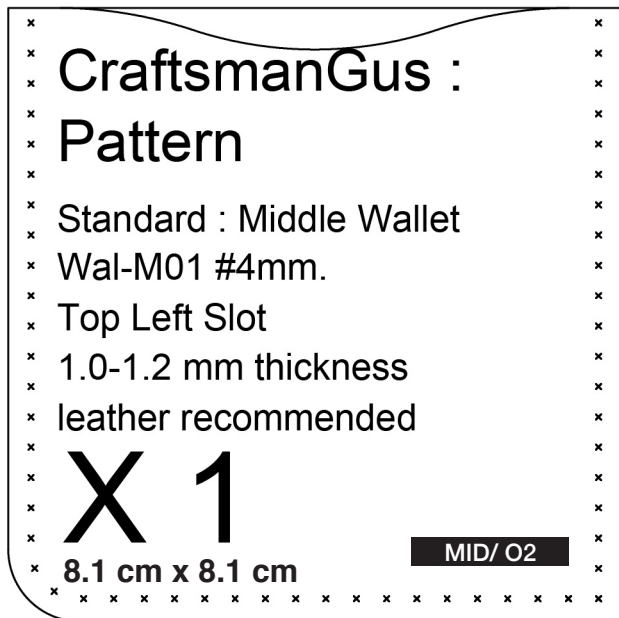



# CraftsmanGus : Pattern

x x x x x x x x x x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x

x


Standard : Middle Wallet  
Wal-M01 #4mm.

Card Slot Main Left Wall Back  
0.8-1.2 mm thickness  
leather recommended

# X 1

8.1 cm x 15 cm

MID/ O4

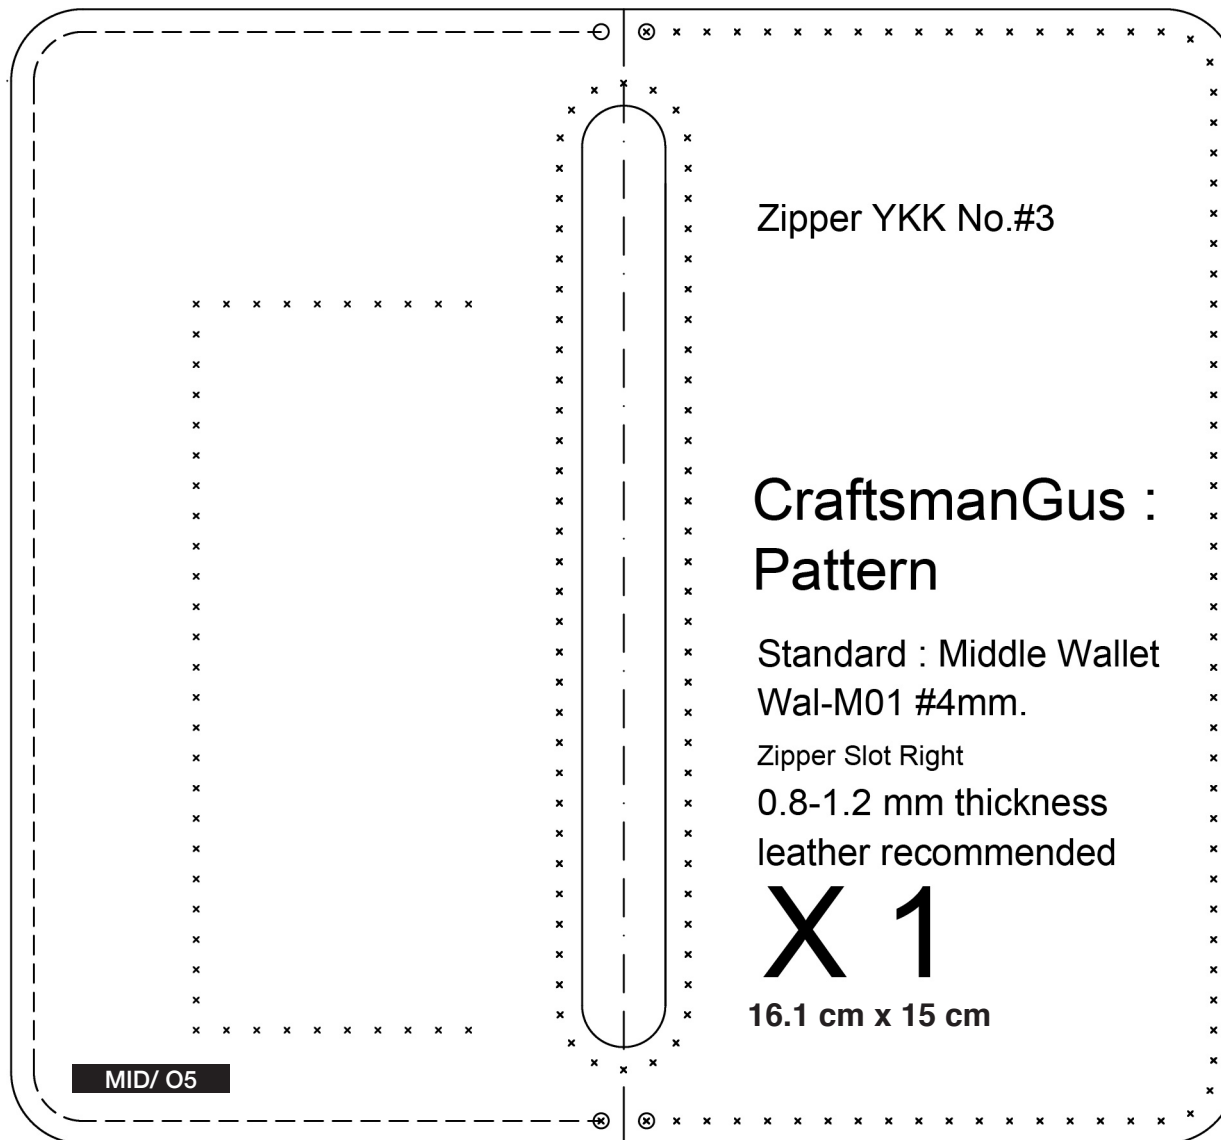

Zipper YKK No.#3

# CraftsmanGus : Pattern


Standard : Middle Wallet  
Wal-M01 #4mm.

Zipper Slot Right  
0.8-1.2 mm thickness  
leather recommended

# X 1

16.1 cm x 15 cm

MID/ O5

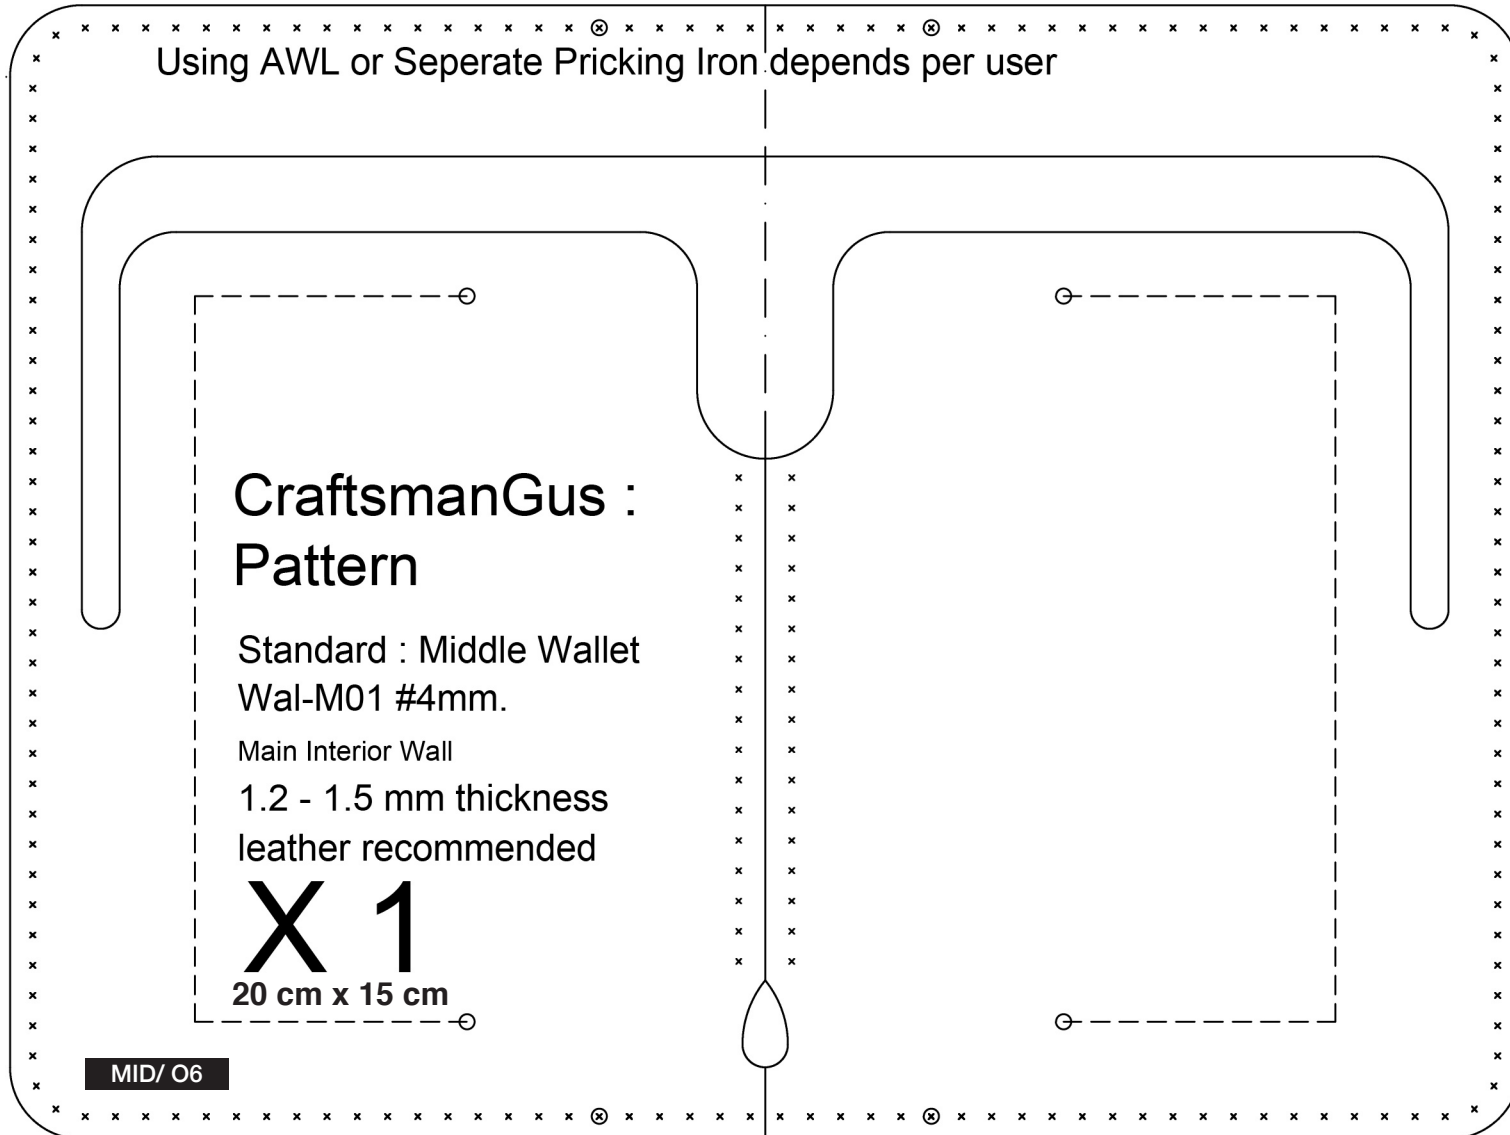



# CraftsmanGus : Pattern

Standard : Middle Wallet  
Wal-M01 #4mm.

COVER

1.5 - 1.8 mm thickness  
leather recommended

# X 1

20 cm x 15 cm

MID/ 07