



Raul Reyes
www.raulreyes3d.com
Youtube Rreyes3d leather
[instagram:@raulreyes3d](https://www.instagram.com/raulreyes3d)

1. PRINT THE PATTERN ON HEAVY CARD STOCK OR NORMAL PAPER AND GLUE IT ON SOMETHING THICKER (SET YOUR PRINTER TO A4 WITH NO MARGIN OR SELECT ACTUAL SIZE)
2. USE THE TEST PAGE TO VERIFY THE DIMENSIONS
3. CUT OUT THE PAPER PATTERN PIECES
4. TRACE THE PATTERN ONTO LEATHER AND CUT ALL THE PIECES REQUIRED
5. YOU CAN WATCH THE FOLLOWING VIDEO TUTORIAL TO SEE THE FULL PROCESS <https://www.youtube.com/channel/UC1ksyC2LQS8q0tV2TtGHqFg>

*YOU CAN ALSO USE OUR FREE 3D CONFIGURATOR TO TEST COLOR AND STYLE COMBINATIONS: <https://www.raulreyes3d.com/TW05A3D>

recommended leather:
2 to 4 Oz Leather (0.9 to 1.5mm)





7,17 inches
[8.2 cm]



Raul Reyes
www.raulreyes3d.com
Youtube Rreyes3d leather
[instagram:@raulreyes3d](https://www.instagram.com/raulreyes3d)

USE THIS PAGE TO TEST YOUR PRINTER

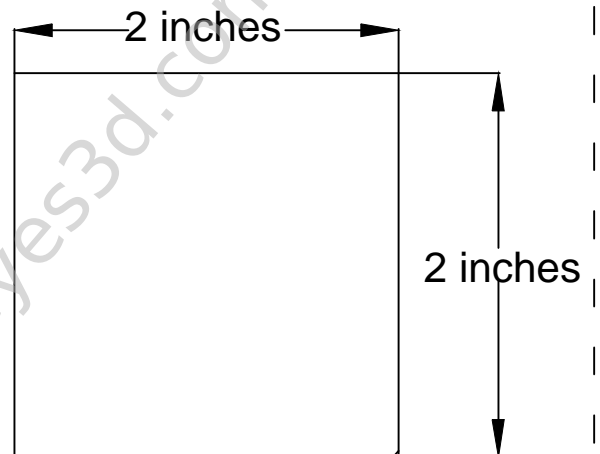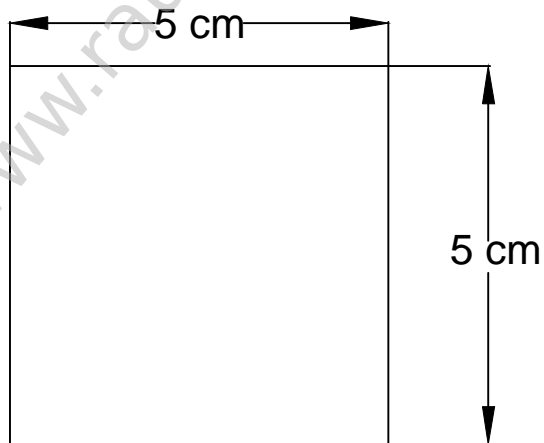


free pattern


www.raulreyes3d.com

1X MIDDLE PANEL

free pattern

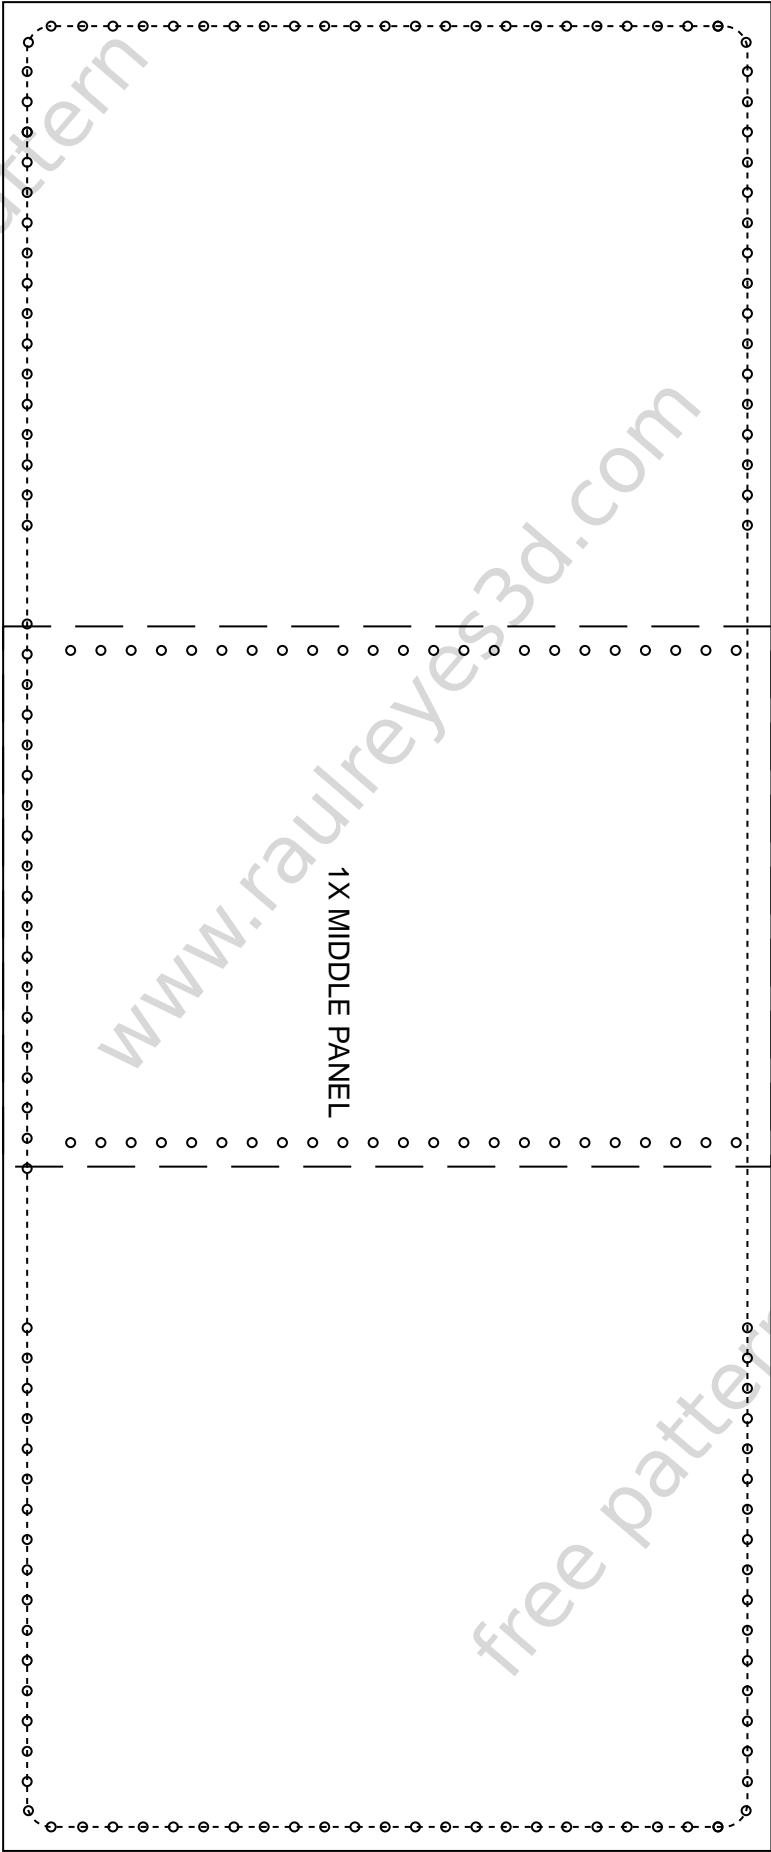

free pattern




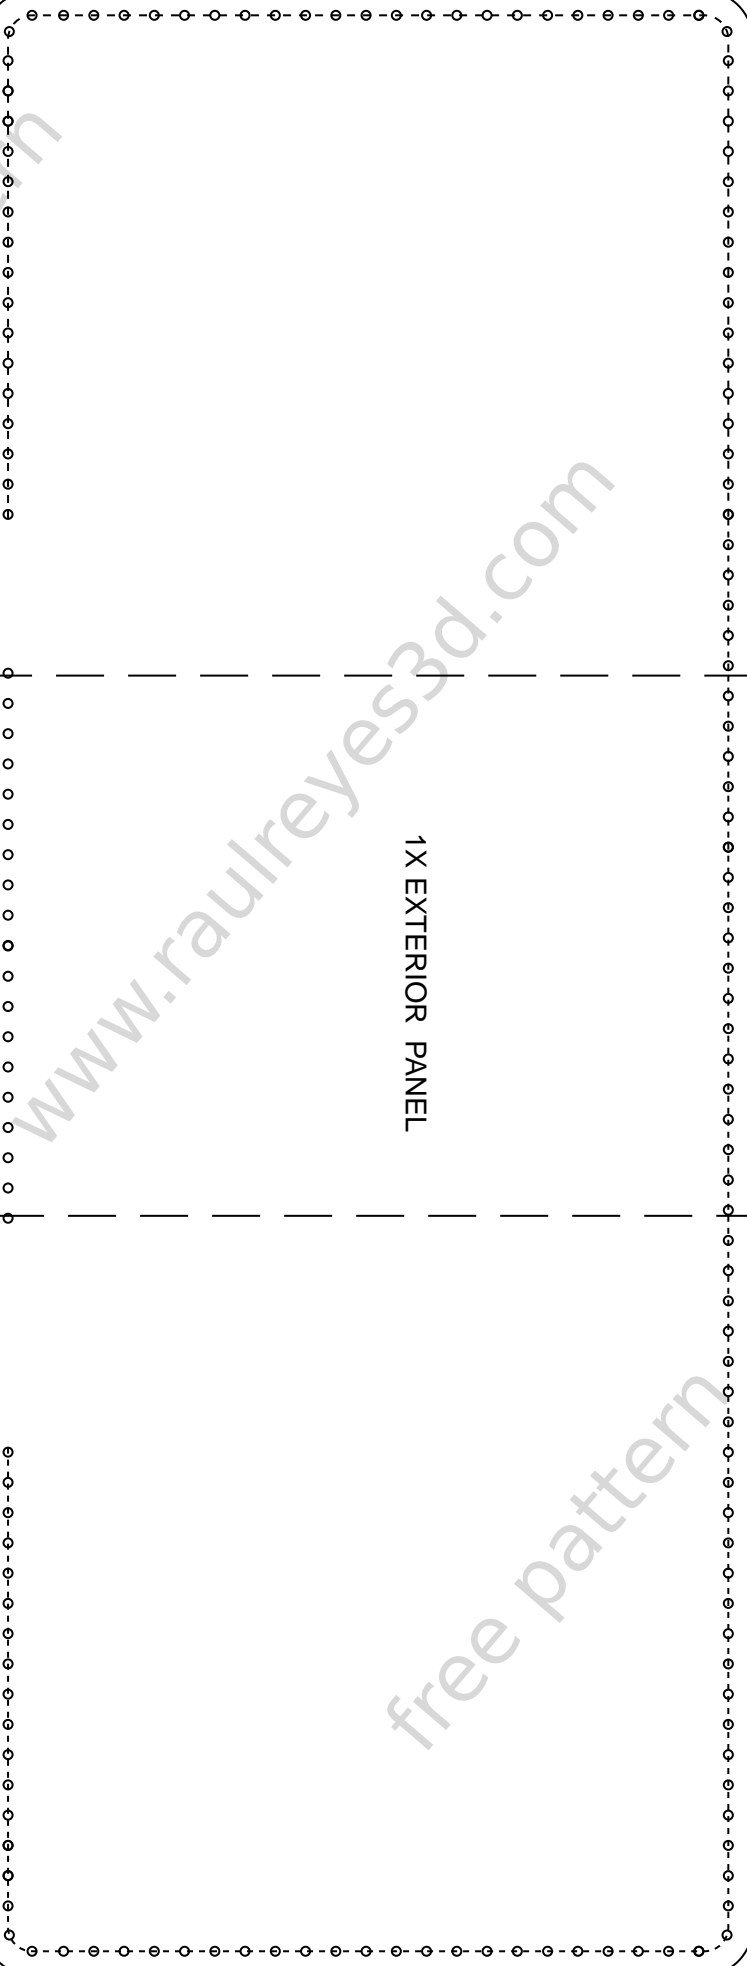


1X EXTERIOR PANEL





www.raulreyes3d.com

free pattern






CHOOSE A POCKET DESIGN

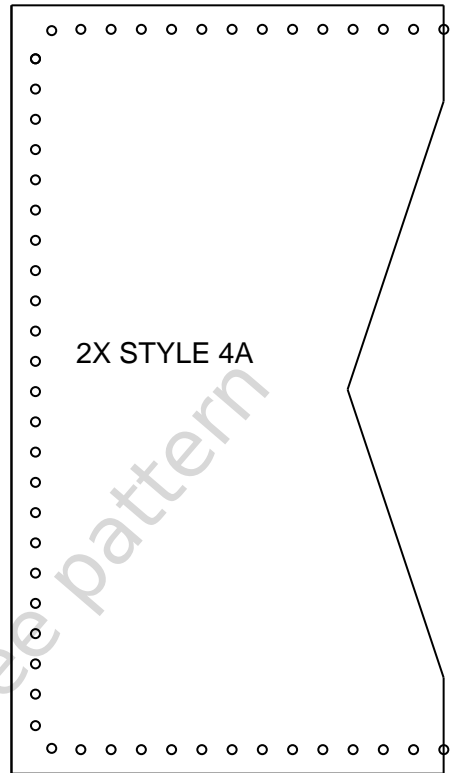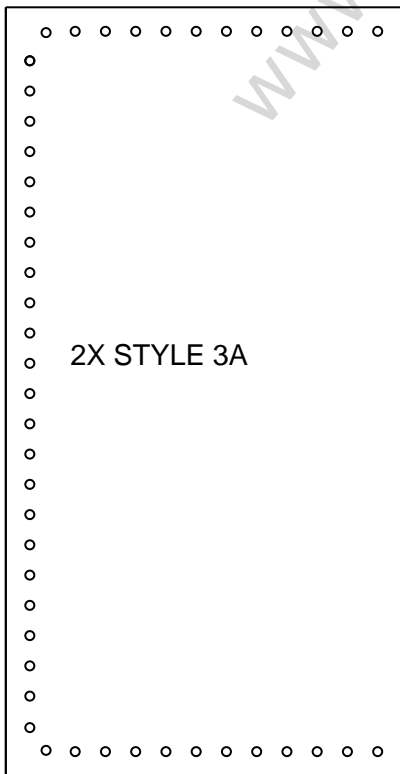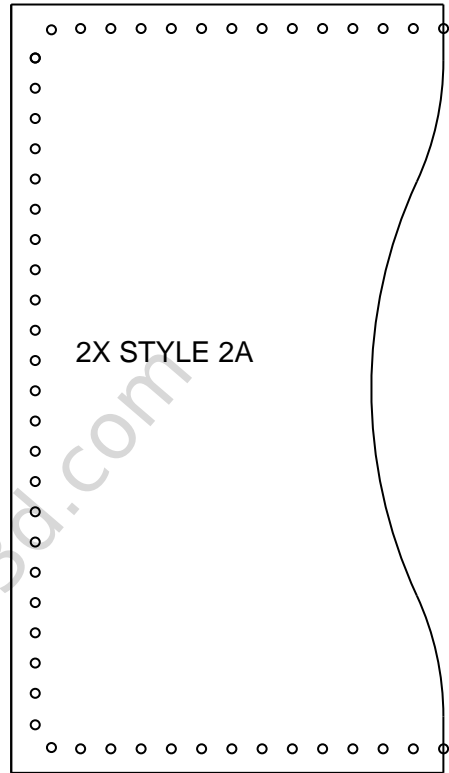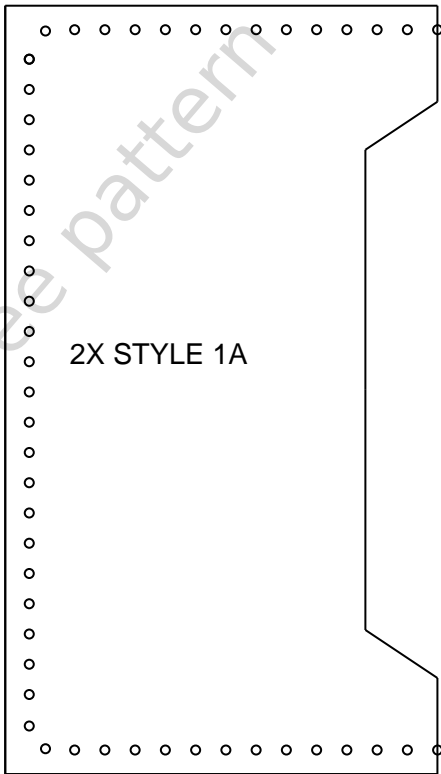


CHOOSE A POCKET DESIGN

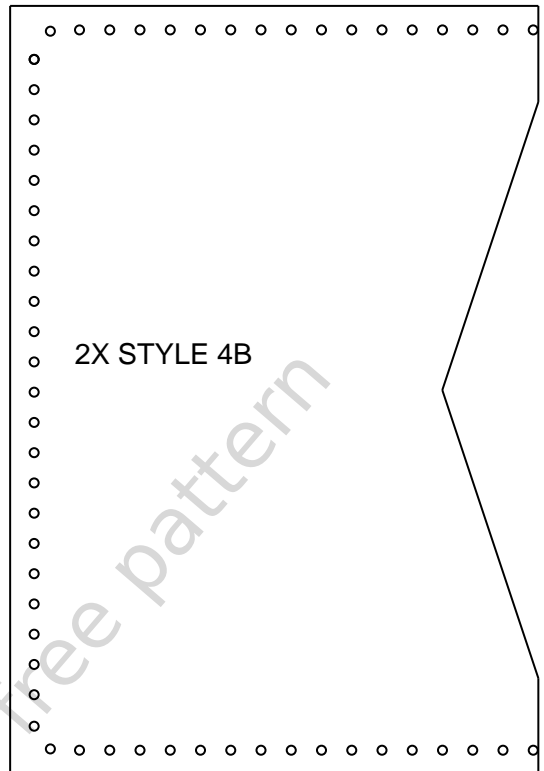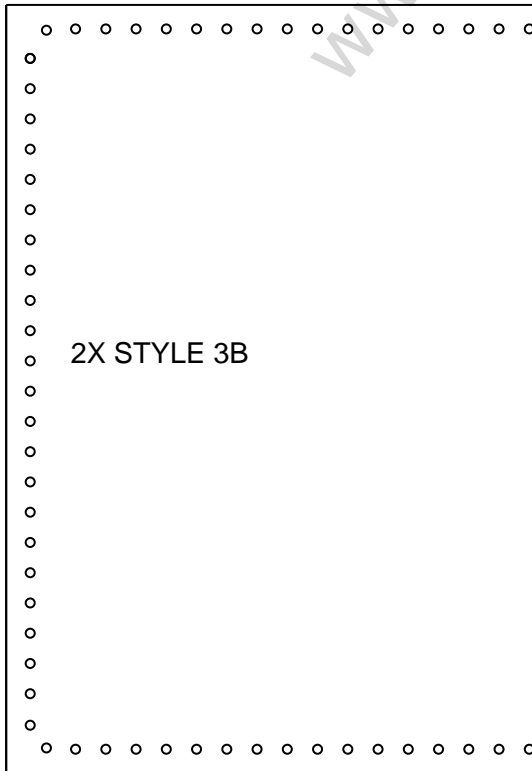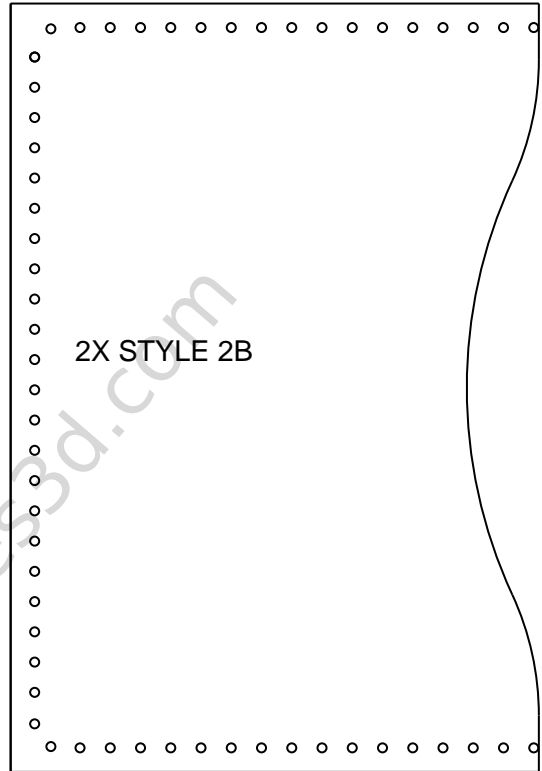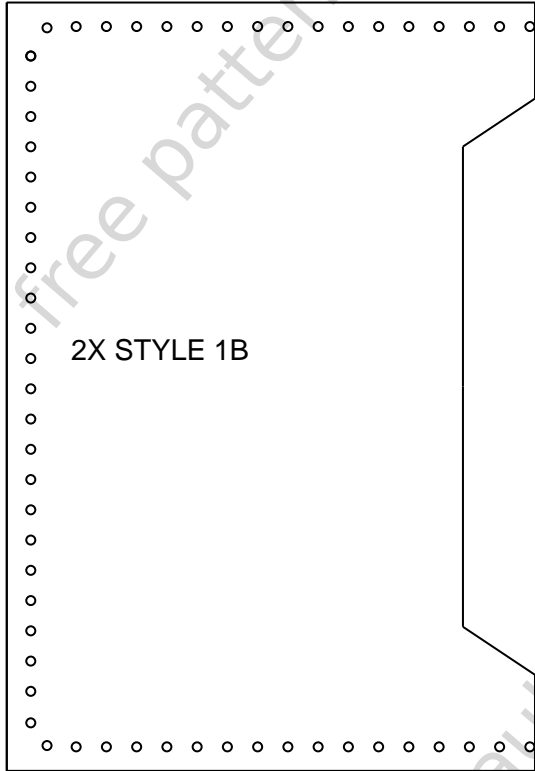

CHOOSE A MIDDLE PANEL DESIGN

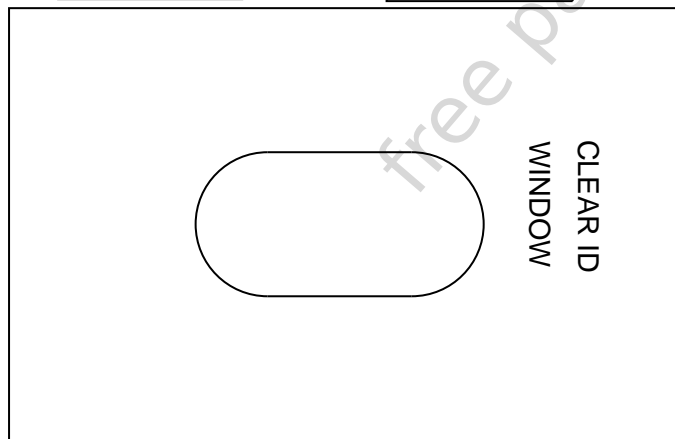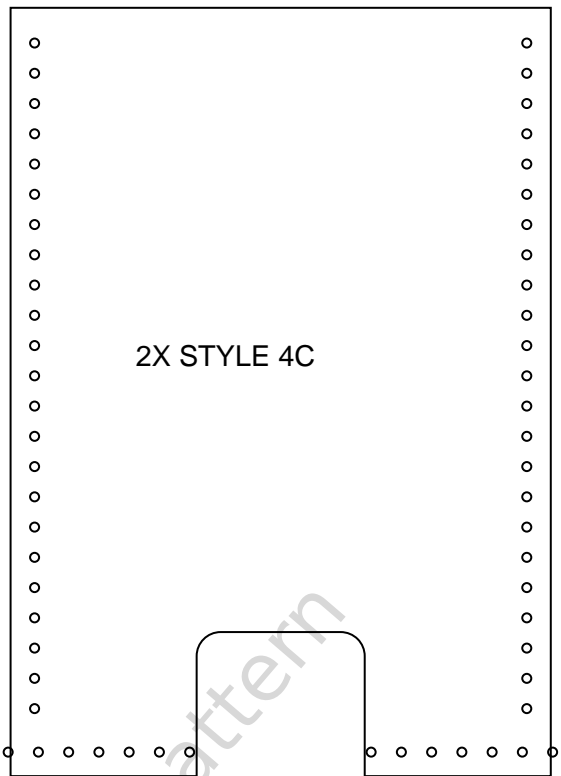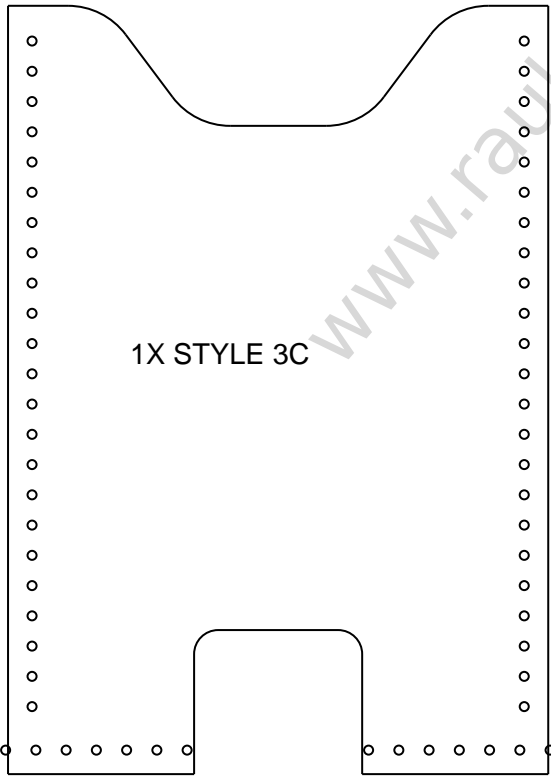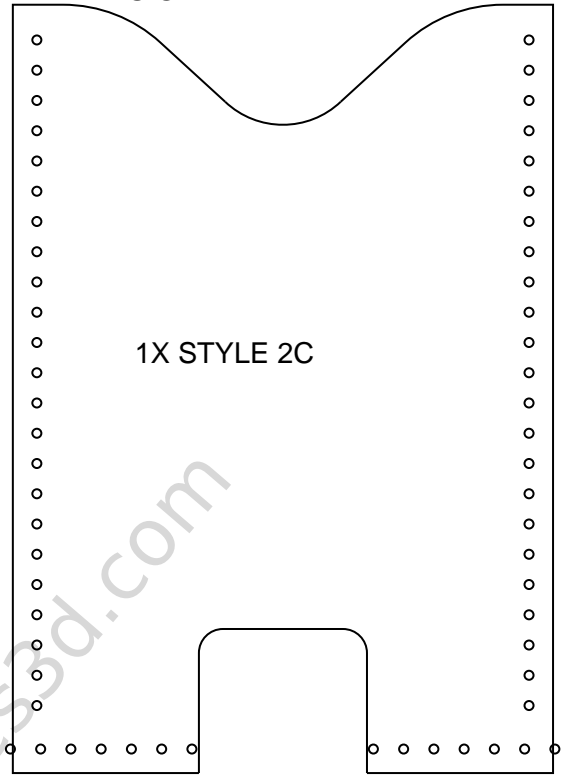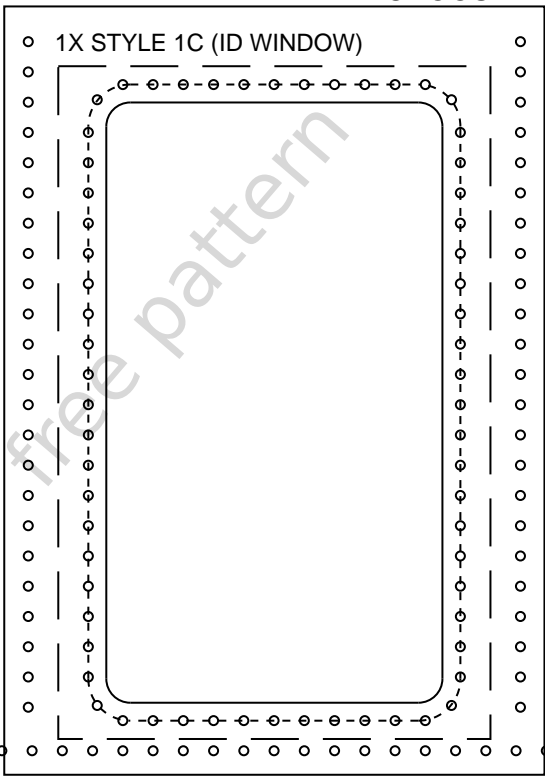

ASSEMBLY LAYOUT

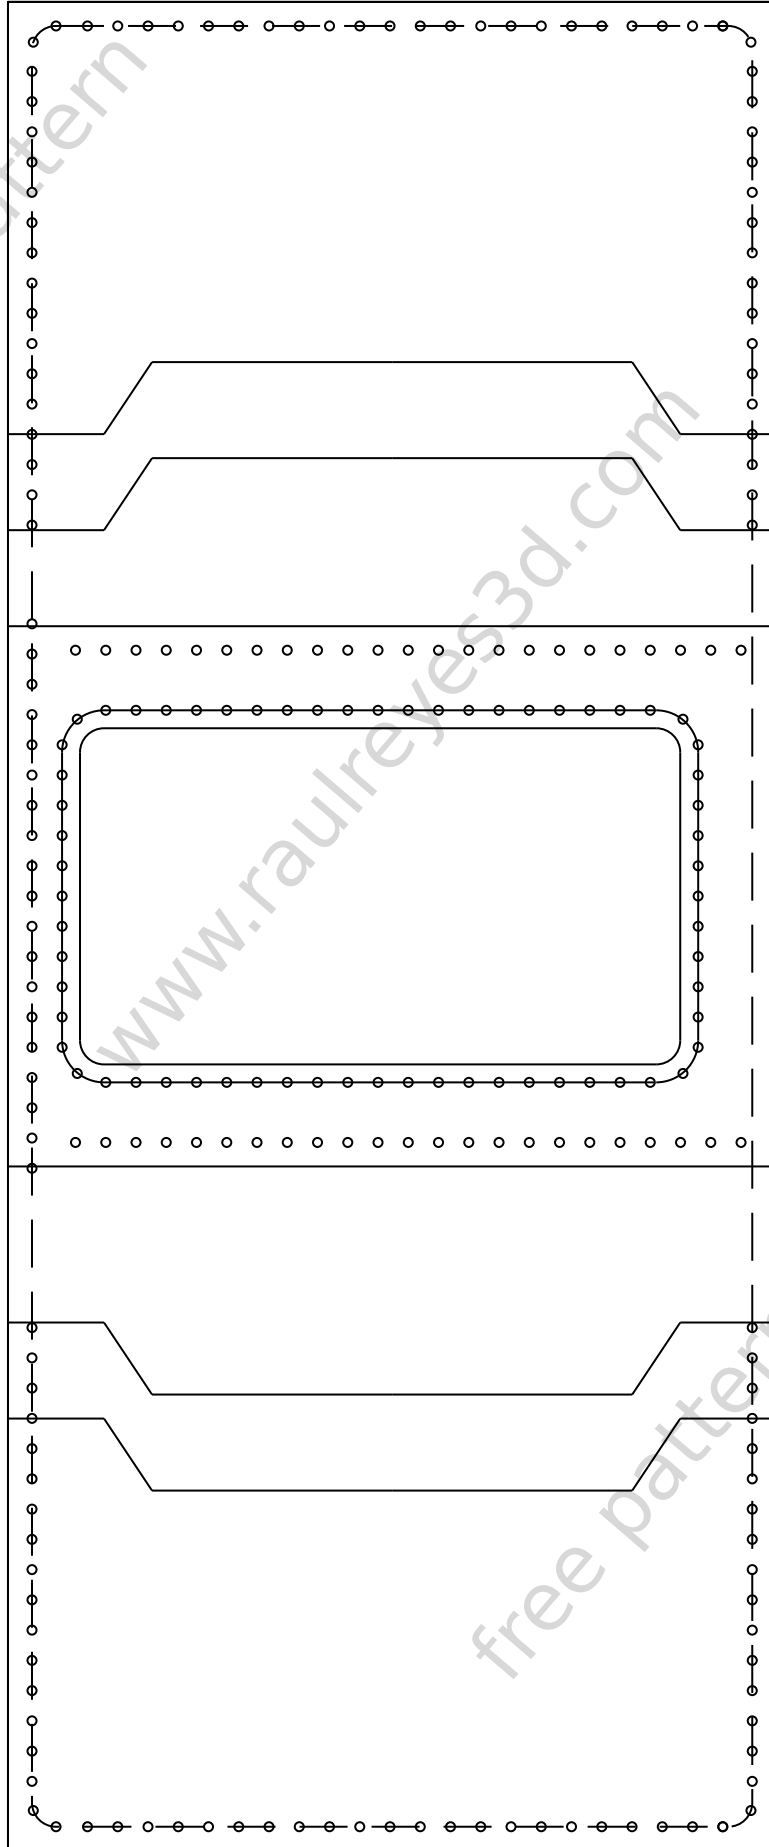

free pattern

www.raulreyes3d.com

free pattern