




ORDER OF OPERATIONS FREE MOTO WALLET

RECOMMENDED LEATHER WEIGHT 40Z

1. PRINT OUT THE PATTERN ON HEAVY CARD STOCK WITH PRINTER SET TO "ACTUAL SIZE"
2. CUT OUT THE PAPER PATTERN PIECES
3. TRACE THE PATTERN PIECES ONTO LEATHER
4. CUT OUT ALL OF THE LEATHER PIECES
5. BURNISH ALL POCKET TOPS BEFORE ASSEMBLY
6. INSTALL SNAPS
7. INSTALL POCKET (S) USING GUIDES ON THE PATTERN AND STITCH
8. GLUE SIDES OF WALLET, FOLD, STICK, AND STITCH
9. SAND, LEVEL, BURNISH EDGES AS DESIRED
10. ENJOY :)

—————
PRINT ACCURACY TEST
THE SOLID LINE SHOULD MEASURE
2 INCHES LONG

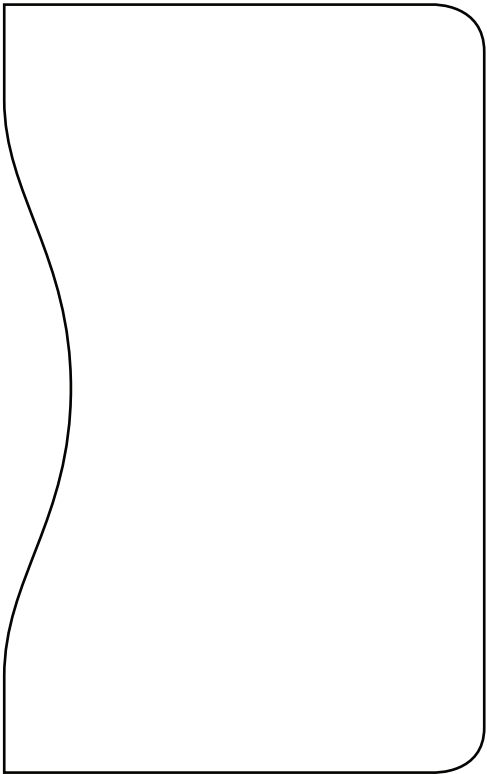



PRINT ACCURACY TEST
THE SOLID LINE SHOULD MEASURE
2 INCHES LONG

