



ACC-36 Instruction


Step 1: Stitch 2 pieces of A03 and 2 pieces of A04 together, with 45-50cm zipper between A04, you can use YKK No.5 or RIRI M6 zipper.

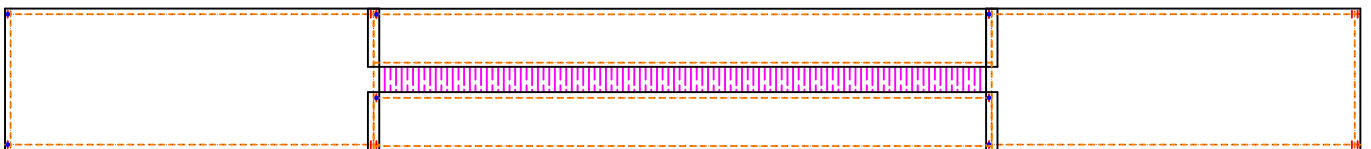

Step 2: Stitch A06 and A05 on A01 to form a front pocket, don't forget install snaps.

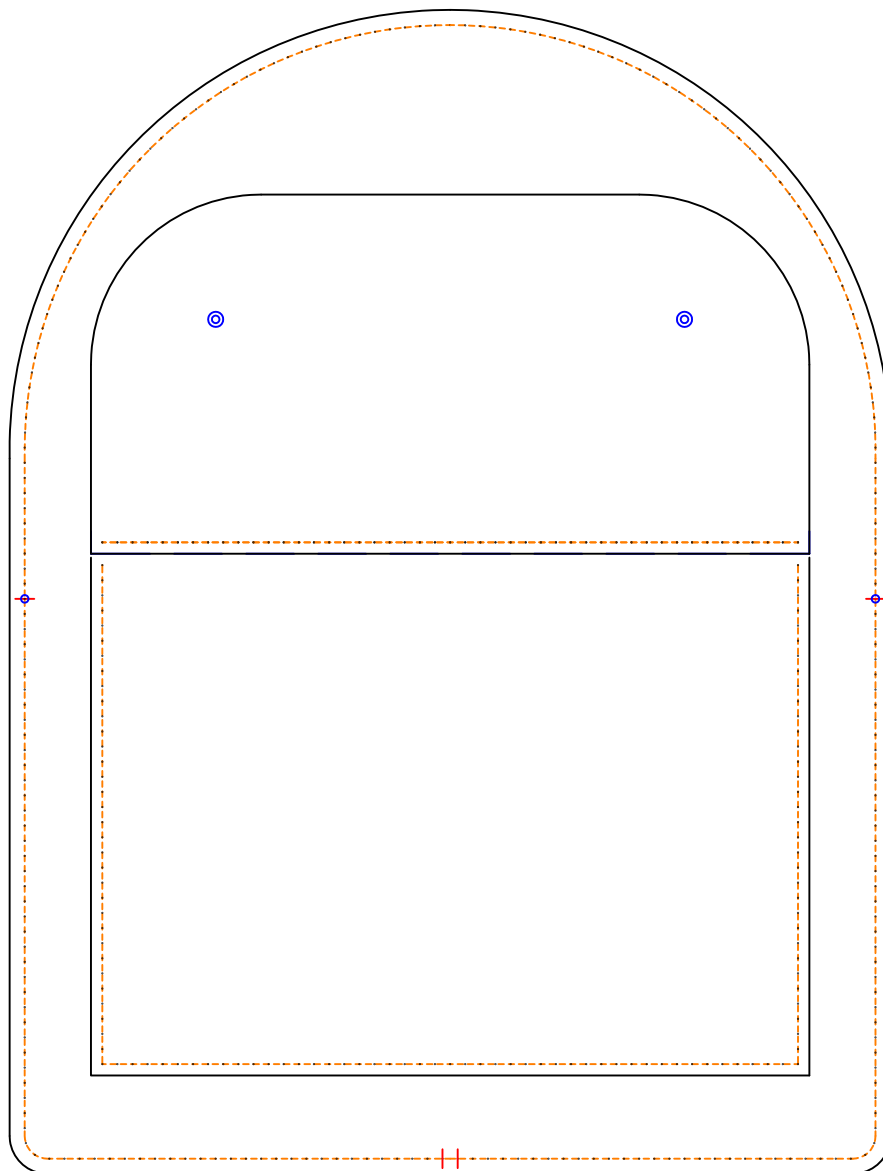

Step 3: Install the handle with 8mm rivet.

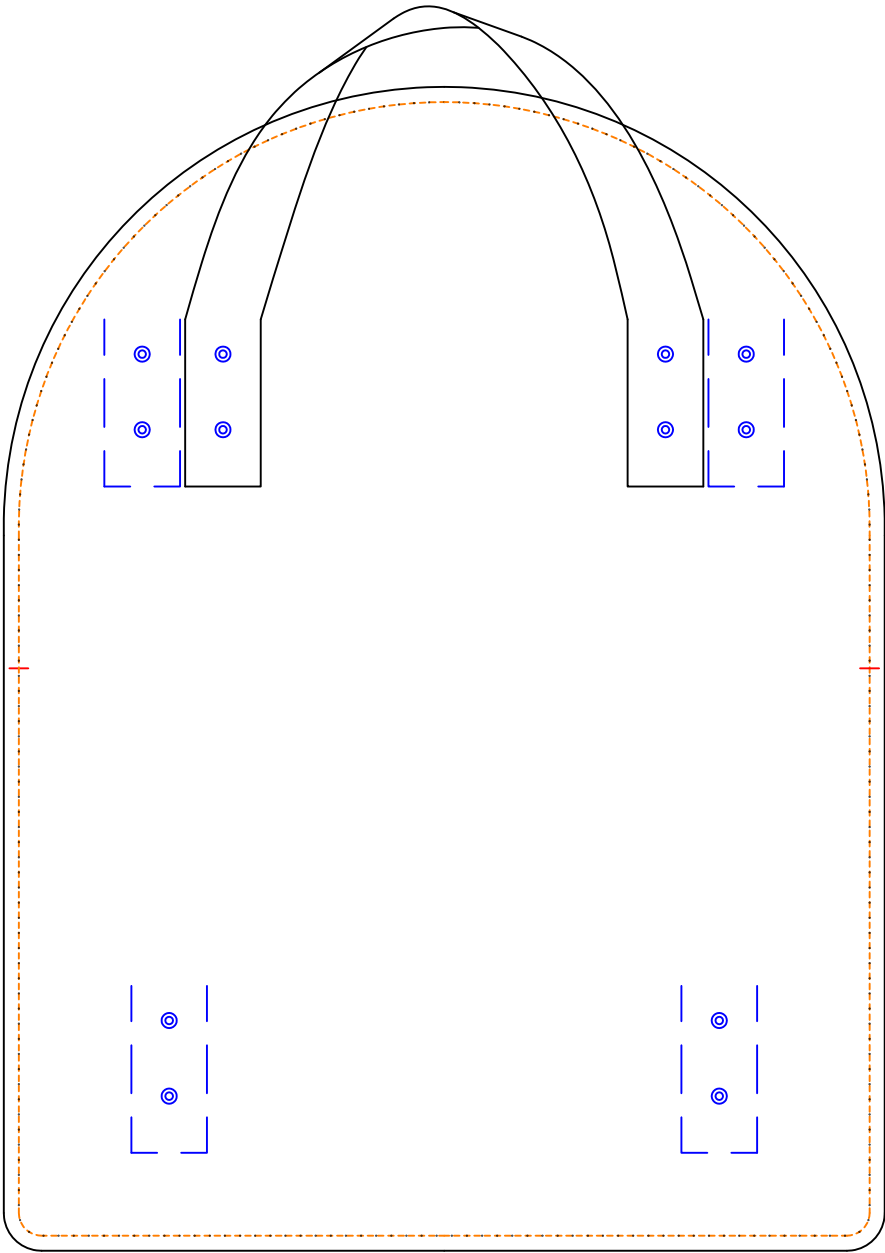

Step 4: Install the shoulder belts on and then stitch the gusset on to form the bag. The key skill is you must stitch the flesh side and turn over the bag.